


1 : Technology on Wire stripless terminal blocks

Needless to strip the edge of wire
Insert wire and pull down the Knob then connetion is done

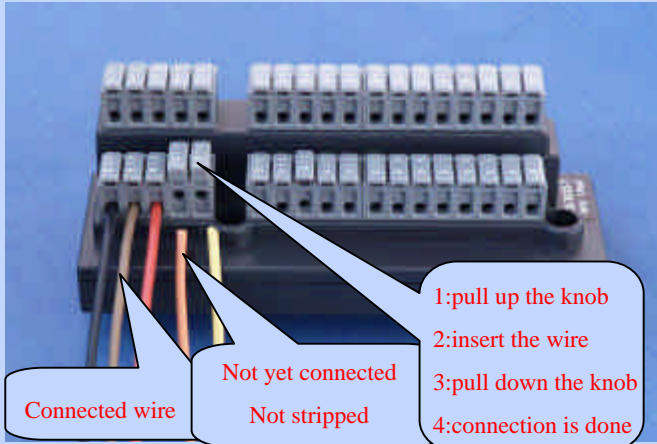

40P connectors on back

2 : Technology on self-up terminal blocks



Not dropdown the screw when loosing screws.
Save time at connecting the wire

3 : Technology on cardedge type terminal blocks



This sample is made for printed board insertion type.
No shave is needed on edge of printed board cause by contact construction .